DeepL
Subscribe to DeepL Pro to translate larger documents.
Visit www.DeepL.com/pro for more information.

Instrukcija pogu instalācijai

Saturs

Disassembly....1
Button installation for the PP1 button....4
Button installation for PP2 button....5
Button installation PP3/PE1....6
Button installation for PZ1 button....8
Copyright and Terms of Use....11

Demontēšana

1. Remove the rear windshield wiper – 13 mm socket.
2. Unscrew the button mechanism itself – 24 mm socket.
3. Open the rear trunk window.

Important! Cover the window with masking tape or a cloth – to prevent scratching the window during removal!

If the power window mechanism is working – open the window and continue following the instructions

If the power window mechanism in the trunk is not working:

- Open the entire trunk and remove the trim, then slide the entire trunk trim down.
- Locate the lock mechanism itself; on the left side, there will be a small opening where you can insert a small key and pull it—the window should open.



1. Image.

4. Unscrew both 10 mm nuts on the window trim:



1. Image.


5. Remove the wiper blade and dismantle the old electric button.

!! Please be especially careful and cautious when prying, pressing, or breaking the old mechanism using tools!!

6. Disconnect the old button's electrical connection.


7. Unscrew the window mechanism bracket (indicated in Figure 3 below with a red arrow).

8. Cut off the mechanism holder (indicated by the blue line in Figure 3 below).

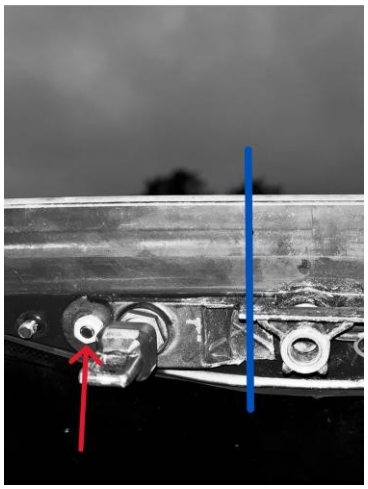

1. Figure.

After cutting, use only the part located within the red area.

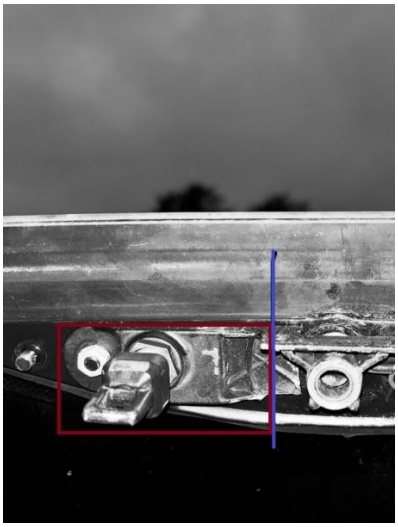

2. Fig.

10. Screw the mechanism holder back on.


Pogas instalācija PP1 pogai

1. Clean the metal surface of the frame.
2. Using **the silicone lubricant** included in the kit, fill the edges of the glass along the indicated circular perimeter (this prevents the white edges of the glass from being visible). Apply the lubricant carefully so that, when filling the edges, the button housing is sealed.



3. Figure.

3. Insert the plastic plug with its mounting tabs aligned with the cutouts in the metal housing.
4. Using a wide flat (Phillips-head) screwdriver, turn the knob 90 degrees to lock it in place.

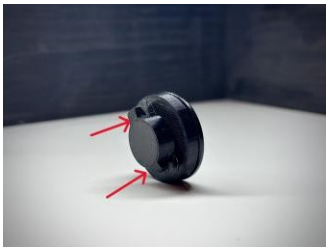

c. Figure.

5. Press the aluminum cover onto the button housing.
6. Install the window trim.
7. Install the trim cap included in the kit:

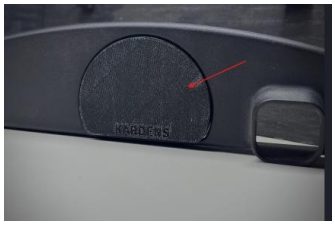


Fig. 7.

8. **After applying the sealant, it is recommended not to wash the car for at least 24 hours! (To allow the sealant to cure).**

Pogas instalācija PP2 pogai

1. Clean the metal surface.
2. Using **the silicone sealant** included in the kit, fill the edges of the glass along the indicated circular perimeter (this prevents the white edges of the glass from being visible). Apply the sealant carefully to ensure that the button housing is sealed when filling the edges.



Figure 8.

3. Insert the button into the designated location.
4. Screw the designated retaining ring in place from the inside of the window, between the window frame and the button, and connect the electrical connection (as shown in Figure 9).

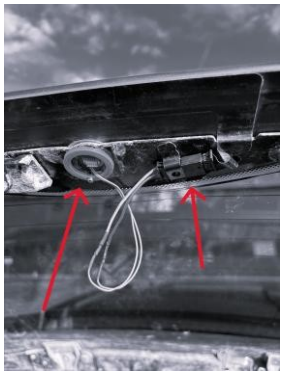


Fig.

5. Install the window trim.


6. Install the trim cover included in the kit:



Fig. 10.

7. **After applying the sealant, it is recommended not to wash the car for at least 24 hours! (To allow the sealant to cure).**

Pogas instalācija PP3/PE1

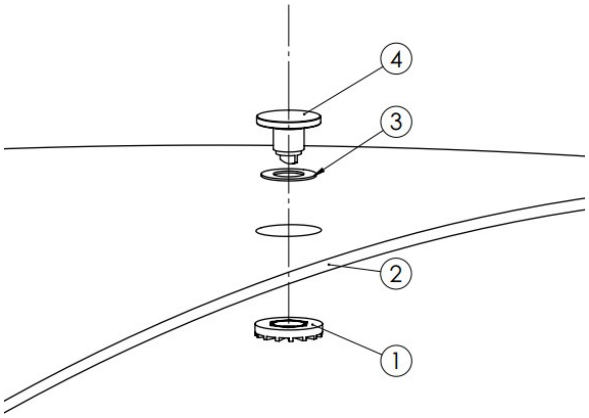

/Installation diagram

1. Clean the metal surface.
2. Using **the silicone sealant** included in the kit, fill the edges of the glass along the indicated circular perimeter (this prevents the white edges of the glass from being visible). Apply the sealant carefully to ensure that the button housing is sealed when filling the edges.




11. Figure.

3. Insert the button support gasket **(3)** into the window cutout **(2)** so that it fits snugly against the window's metal frame. (If desired, you can also apply silicone sealant to the inner edge of the gasket to ensure a tight seal).



12. Figure.

4. Insert the button **(4)** into the designated location – **(2)**.
5. **On the other side of the window**, screw on the designated support nut **(1)** and tighten it so that the button presses against the frame. Connect the electrical connection.

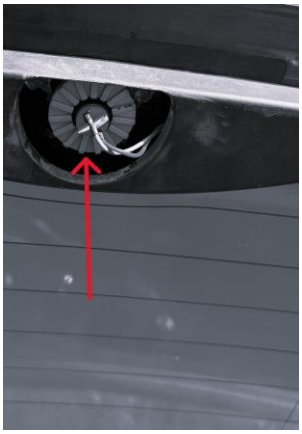

13. Image.

6. Install the window trim.


7. Install the trim cover included in the kit:



14. Figure.


8. **After applying the sealant, it is recommended that you do not wash the car for at least 24 hours! (To allow the sealant to cure).**

Pogas instalācija PZ1 pogai

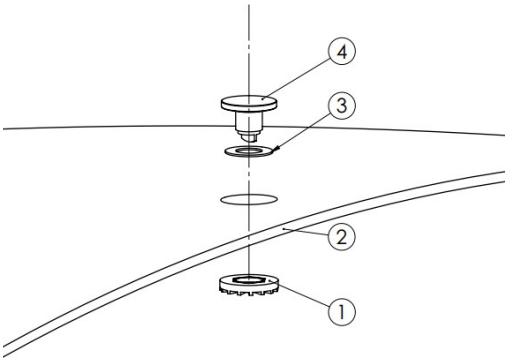

/Installation diagram

1. Clean the metal surface.
   Carefully remove the plastic/rubber ring shown in Figure 15 below using a screwdriver and a knife, and thoroughly clean the area.

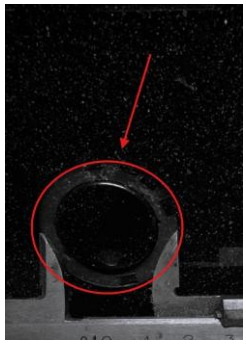

15. Figure.

2. Using **the silicone sealant** included in the kit, fill the edges of the glass along the indicated perimeter of the ring (this prevents the white edges of the glass from being visible). Apply the sealant carefully so that, when filling the edges, the button housing is properly sealed.



1c.Image.

3. Insert the button support gasket **(3)** into the window cutout **(2)** so that it fits against the window's metal frame. (If desired, you can also apply silicone lubricant to the inner edge of the gasket to ensure a tight seal).

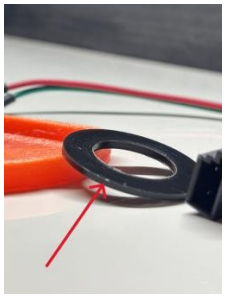


Figure 17.

4. Insert the button **(4)** into the designated location – **(2)**.
5. **On the other side of the window**, screw on the designated support nut **(1)** and tighten it so that the button presses against the housing. Connect the electrical connection.



Figure 18.

6. Install the window trim.
7. Install the trim cover included in the kit:

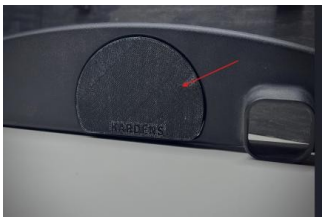


Fig. 1S.

8. **After applying the sealant, it is recommended not to wash the car for at least 24 hours! (To allow the sealant to cure).**

Autortiesības un lietošanas noteikumi

Warning!

We assume no liability for the installation process if incorrect removal/installation methods or improper tools are used.

These installation instructions are the intellectual property of
Kardens.lv. Authorized for the customer's personal use only.
Distribution without written permission is prohibited!

May it serve you well!

/Kardens.lv